

**Q: How do I transfer my VHS tape to DVD or HDD (Hard Drive of DVD Recorder)?**

**1: Recording Onto DVD**

**A:** Place VHS tape in VCR



**B:** set the Sony DVD recorder onto the “Line 2” input. And select either HDD or DVD. (if onto DVD insert a Blank DVD and the recorder will automatically format it)



C: Press “rec” either on the remote or directly on the DVD Recorder




D: Press Play on the VCR and DVD Recorder will be simultaneously recording.




E: Press “rec stop” when the segment you wish to dub is over. (Keep in mind that the DVD’s hold on average a max of 2 hours)  
When completed, your recording will be saved under the title list of either the Hard drive (HDD) or the actual DVD if you recorded directly onto it

F: You can customize the name of your movie, Go to the “title list”. Select your recording. And select “Title Name.”

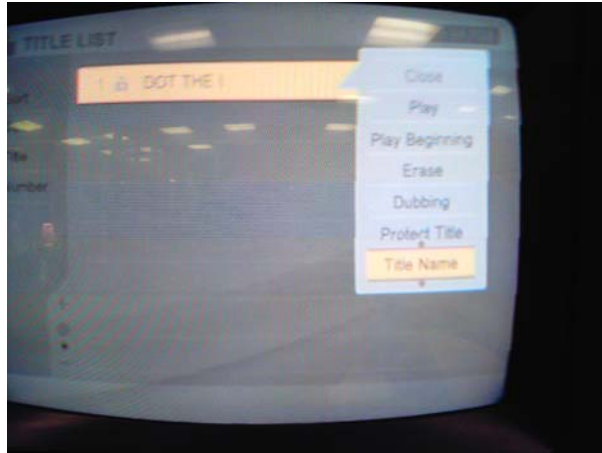

 
From there clear the time and enter the desired name and press finish

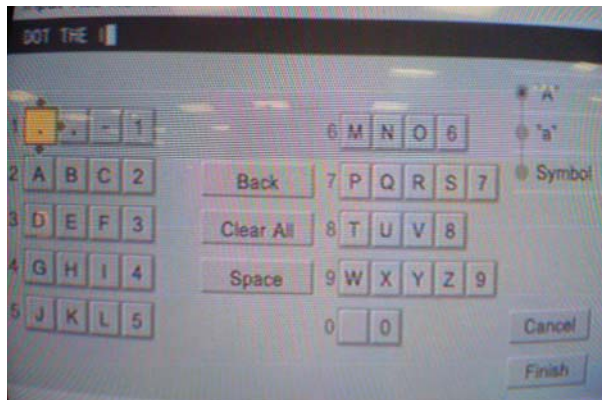

### G: Finalize

This is a crucial step, if you do not finalize your disc it will not play in other dvd players.

1. Make sure the Recorder is set to DVD
2. Press Tools on the remote
3. Select Disc Info (You can edit the name of your file(s) from here as well
4. Then select Finalize. The process takes about three minutes

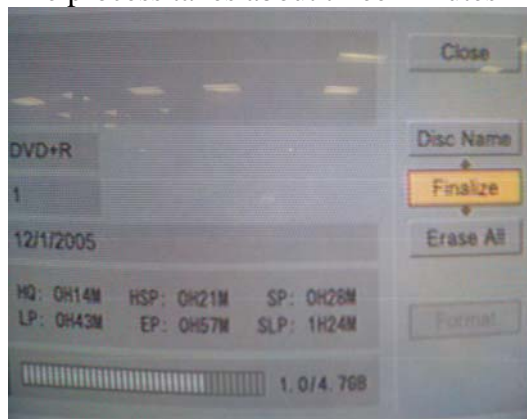

## 2: Recording from the Hard Drive


A: Set the Sony recorder to the HDD mode




B: Press Title List



C: Select your title

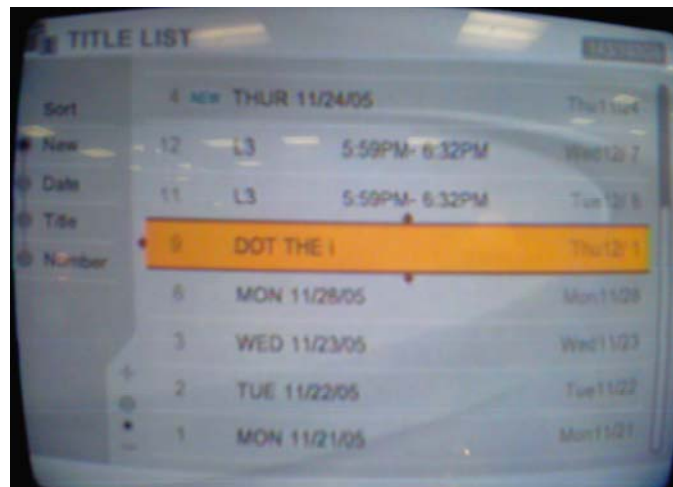


D: Choose the Dubbing Option

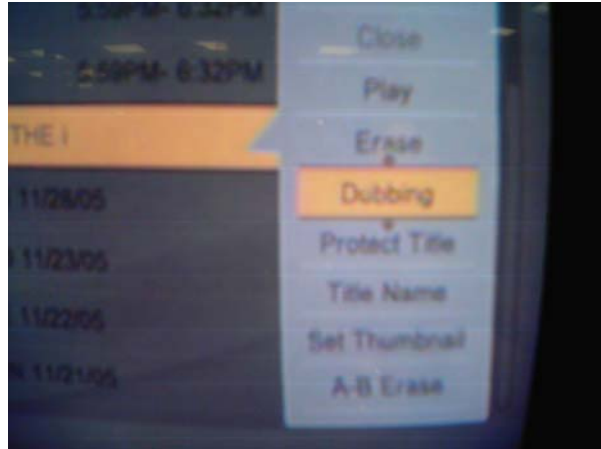

E: Select the Desired Speed

- The speed determines the quality of the image.
- Select fast 2.3 GB
  - This speed compromises quality but it is a lot faster
  - If you choose another speed it will require recording at real speed, meaning it takes too long

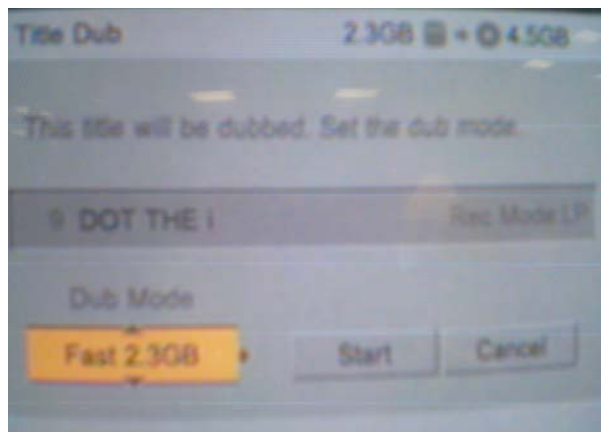

**F: Finalize**

Refer back to Finalize step